


WHR 62 – QUICK CONFIGURATION GUIDE

AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT


Set the units through dip switch following the instructions below, in case of single unit, set as a MASTER.

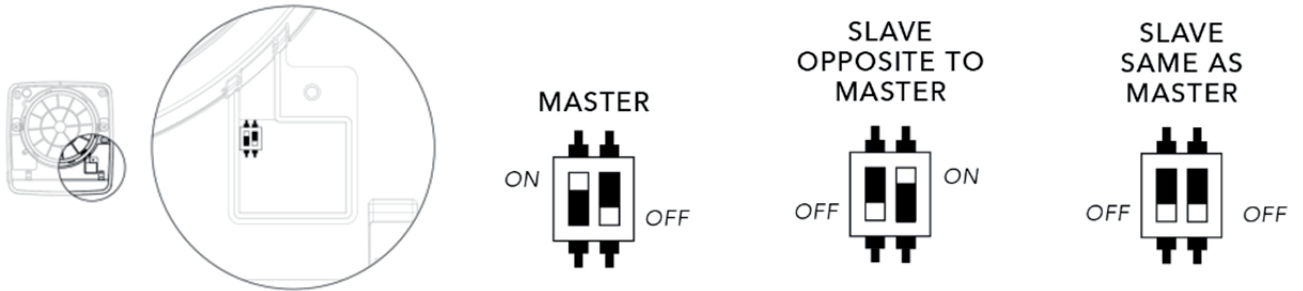


Unit 1	Unit 2	Unit 3	Unit 4	Unit 5
MASTER	SLAVE OPPOSITE TO MASTER	SLAVE SAME AS MASTER	SLAVE OPPOSITE TO MASTER	ETC...

WHR 62 – QUICK CONNECTIONS

Single unit connection:

 
 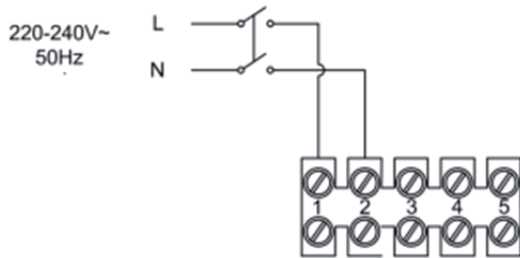



 

 

 


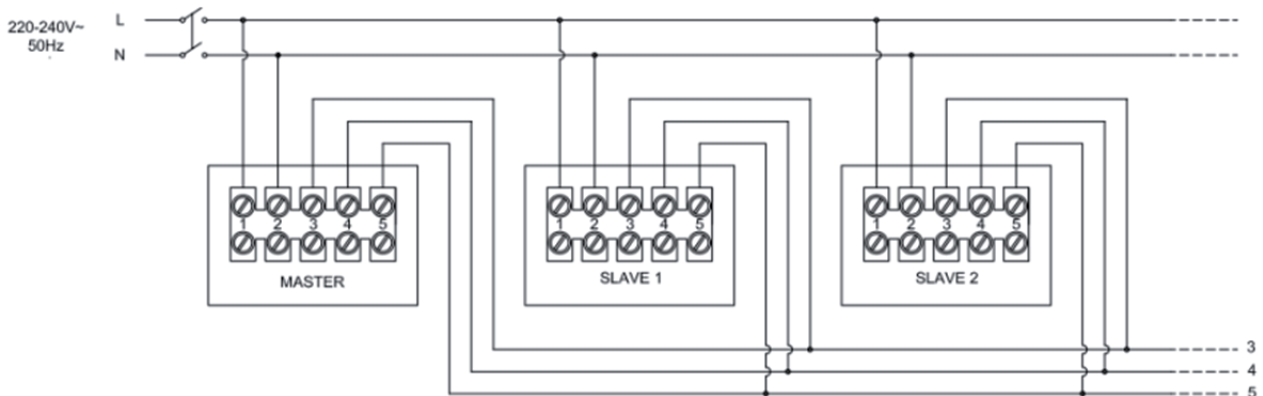


 

 


MASTER-SLAVE system connection:



WHR 62 – QUICK INSTRUCTIONS FOR USE

AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT

Mode	Features	Button for selection	Screen display	Humidity sensor	Twilight sensor	Shutter	Standard operation	Operation in alarm
AUTOMATIC				Activated	Activated	Open	Heat recovery	Extraction
SURVEILLANCE				Activated	Activated	Closed	Standby	Extraction
MANUAL				Not activated	Not activated	Open	Heat recovery	Not activated
NIGHT				Not activated	Not activated	Open	Heat recovery	Not activated
TIMED EXTRACTION				Not activated	Not activated	Open	Extraction	Not activated
MASTER SLAVE AIR FLOW				Not activated	Not activated	Open	Air flow	Not activated
SLAVE MASTER AIR FLOW				Not activated	Not activated	Open	Air flow	Not activated
EXTRACTION				Not activated	Not activated	Open	Extraction	Not activated
INTAKE				Not activated	Not activated	Open	Intake	Not activated

Cod.P08057000

